

# MILDCARES®



## S1 PRO Smart Head Massager

04

Washable,  
Removable  
Heads

96

Silicone  
Kneading  
Nodes



## CONTENTS

- 1 Introduction
- 2 Know Your Product
- 3 Specifications
- 4 How To Use
- 5 Maintenance & Charging
- 6 Safety Notes & Caution
- 7 Warranty

## INTRODUCTION

The MildCares Smart Head & Scalp Massager is crafted to deliver instant relaxation and everyday wellness. Its smart design makes it perfect for reducing stress, improving circulation, and enhancing your self-care routine at home or on the go.

The MildCares Smart Head Massager is a go-to product for relaxation and wellness. Featuring 96 acupressure nodes with soft silicone bristles, it provides a soothing and tangle-free massage. The detachable heads are washable and ideal for use with hair oils. Its gentle rotation boosts endorphin release and enhances blood circulation, helping to reduce headaches and promote hair growth. This versatile and compact massager can also be used on the neck, shoulders, and knees. With its rechargeable, cordless design and ergonomic handle for a comfortable grip, the massager offers three modes to personalize your massage experience.

With one-touch operation, the MildCares Smart Head & Scalp Massager offers three dynamic massage modes designed for complete relaxation.

### Regular Mode

Perfect for daily use and easing tension.


### Deep Mode

Boosts circulation for a soothing, deeper massage.

### Pulsating Mode

Alternates between Regular and Deep modes to deliver a versatile massage that enhances overall well-being.

## know to your Products

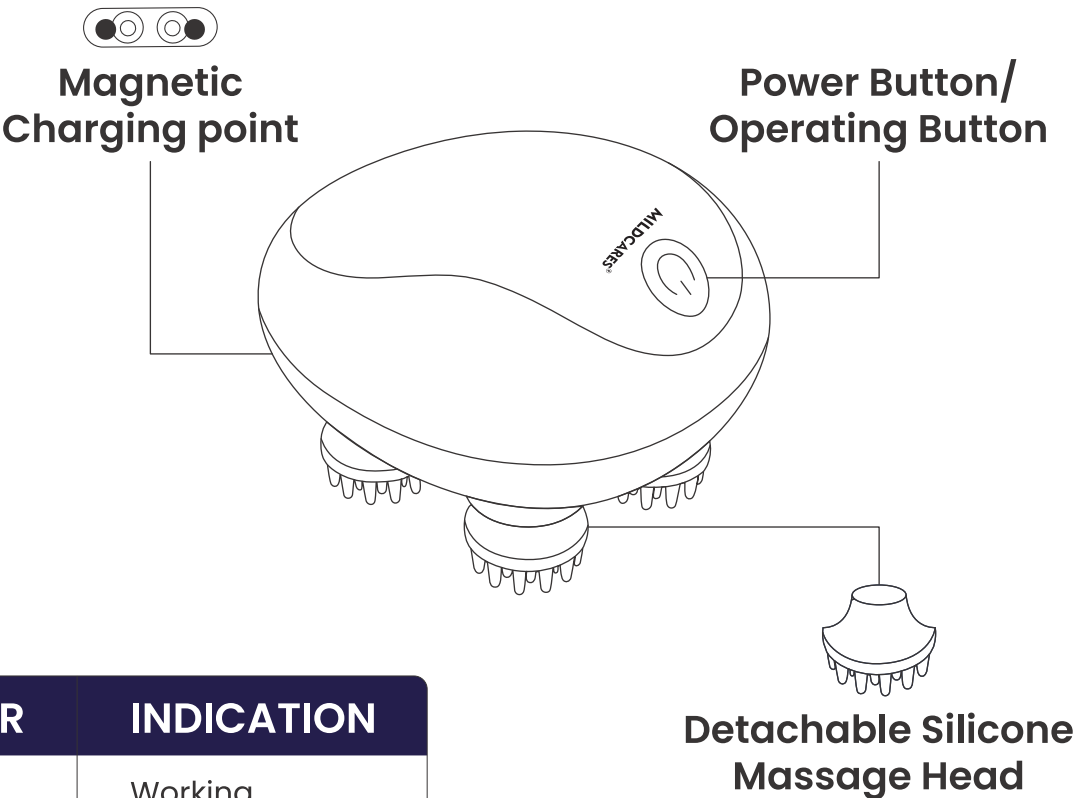


COLOR	INDICATION
Green	Working
Red	Charging
Red	Low battery
Blank	Fully charged

## Specifications


Charging voltage	5V
Charging current	1A
Charging time	3.5 hours
Usage time	Up to 3 hours
Auto shutoff time	15 mins
Battery capacity	900 mAh
Working voltage	5V
Rated power	5W
Product weight	192 gm
Waterproof rating	IPX4
Power supply mode	Rechargeable Lithium Battery
Product dimensions	110mm x 70.3mm x 90.5mm

## know to your Products

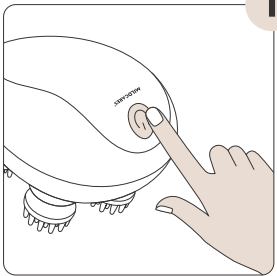

### 1 Power ON/OFF

Long press the power button to turn ON/OFF the massager.

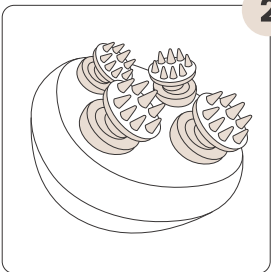

### 2 Select Mode


Short press the power button to select/switch between 3 massage modes.

**Regular Mode:** Massage claw forward slow rotation.  
**Deep Mode:** Massage press slow rotation alternately.  
**Pulsating Mode:** Massage claw rotates alternately in the forward direction.



### 3 Start Massaging

Place the massager on your scalp/head. Either hold the massager steady and let the rotating heads & soft silicone bristles massage, or rotate the massager yourself in a circular motion gently.

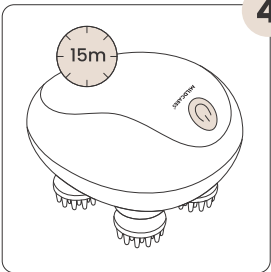

### 4 Massage Duration

Massage for a few minutes per session, adjusting the mode based on your comfort level. The product has a 15 mins auto shut off program.



## Maintenance & Charging

- Clean the entire product with a cloth and ensure it is dry.
- Clean the silicone heads separately with water to remove any dirt.
- Only splash-resistant, suitable for workouts or light rain. Avoid immersing in water.
- Avoid using a corrosive liquid for cleaning.
- Fully charge the product before use.
- Avoid overcharging the product.

## Safety Notes & Caution

- Keep out of reach of children.
- Avoid using on damaged or inflamed skin on the head.
- Avoid use if you have had recent surgery on the head/face.
- Avoid applying excessive pressure during use to prevent skin irritation.

## Warranty

Thank you for purchasing our product. Our company provides a 1-year comprehensive warranty that covers hardware and software problems. Any damage caused by the incorrect use of the product is not covered. Feel free to contact our team if you have questions or concerns.

## Warranty Commitment

1. 1-year warranty from the original date of purchase.
2. Warranty only applies when the product fails under normal operation.
3. Free repair service available during the warranty period.

## Warranty DOES NOT cover

1. Warranty expired.
2. Physical damage such as breaking, extrusion, distortion, and broken display.
3. Incorrectly following product instructions or improper behavior in usage, storage, maintenance, or operation.
4. Failure or damage beyond product specifications (e.g., extreme temperatures, humidity, electromagnetic interference, etc).
5. Unauthorized repair, modification, or dismantling.
6. Problems with non-company electronic product or components.
7. The warranty applies only to the product. The accessories are not covered under warranty.

# About Us – MildCares Pvt. Ltd.

At **MildCares Pvt. Ltd.**, we are dedicated to redefining personal hygiene, wellness, and intimate care with safe, innovative, and eco-friendly solutions. Our wide range of products — from menstrual care and hygiene essentials to massagers and skincare solutions — is designed to provide comfort, confidence, and everyday wellness.

We believe in Health, Hygiene & Happiness as our core values, ensuring every product meets high standards of quality, safety, and sustainability. Trusted by thousands, MildCares continues to make self-care simple, effective, and accessible.

---

For feedback / Suggestion / Complaint, Contact

**Customer Care: +91 989-909-5800**

 [mildcares.com](https://mildcares.com) |  [reachus@mildcares.com](mailto:reachus@mildcares.com)

---

Follow us on  |  |  [mildcaresofficial](https://www.instagram.com/mildcaresofficial)

**MILD CARES PVT. LTD.**

First Floor, B-II/59 Mohan Cooperative Industrial Area New Delhi, 110044